

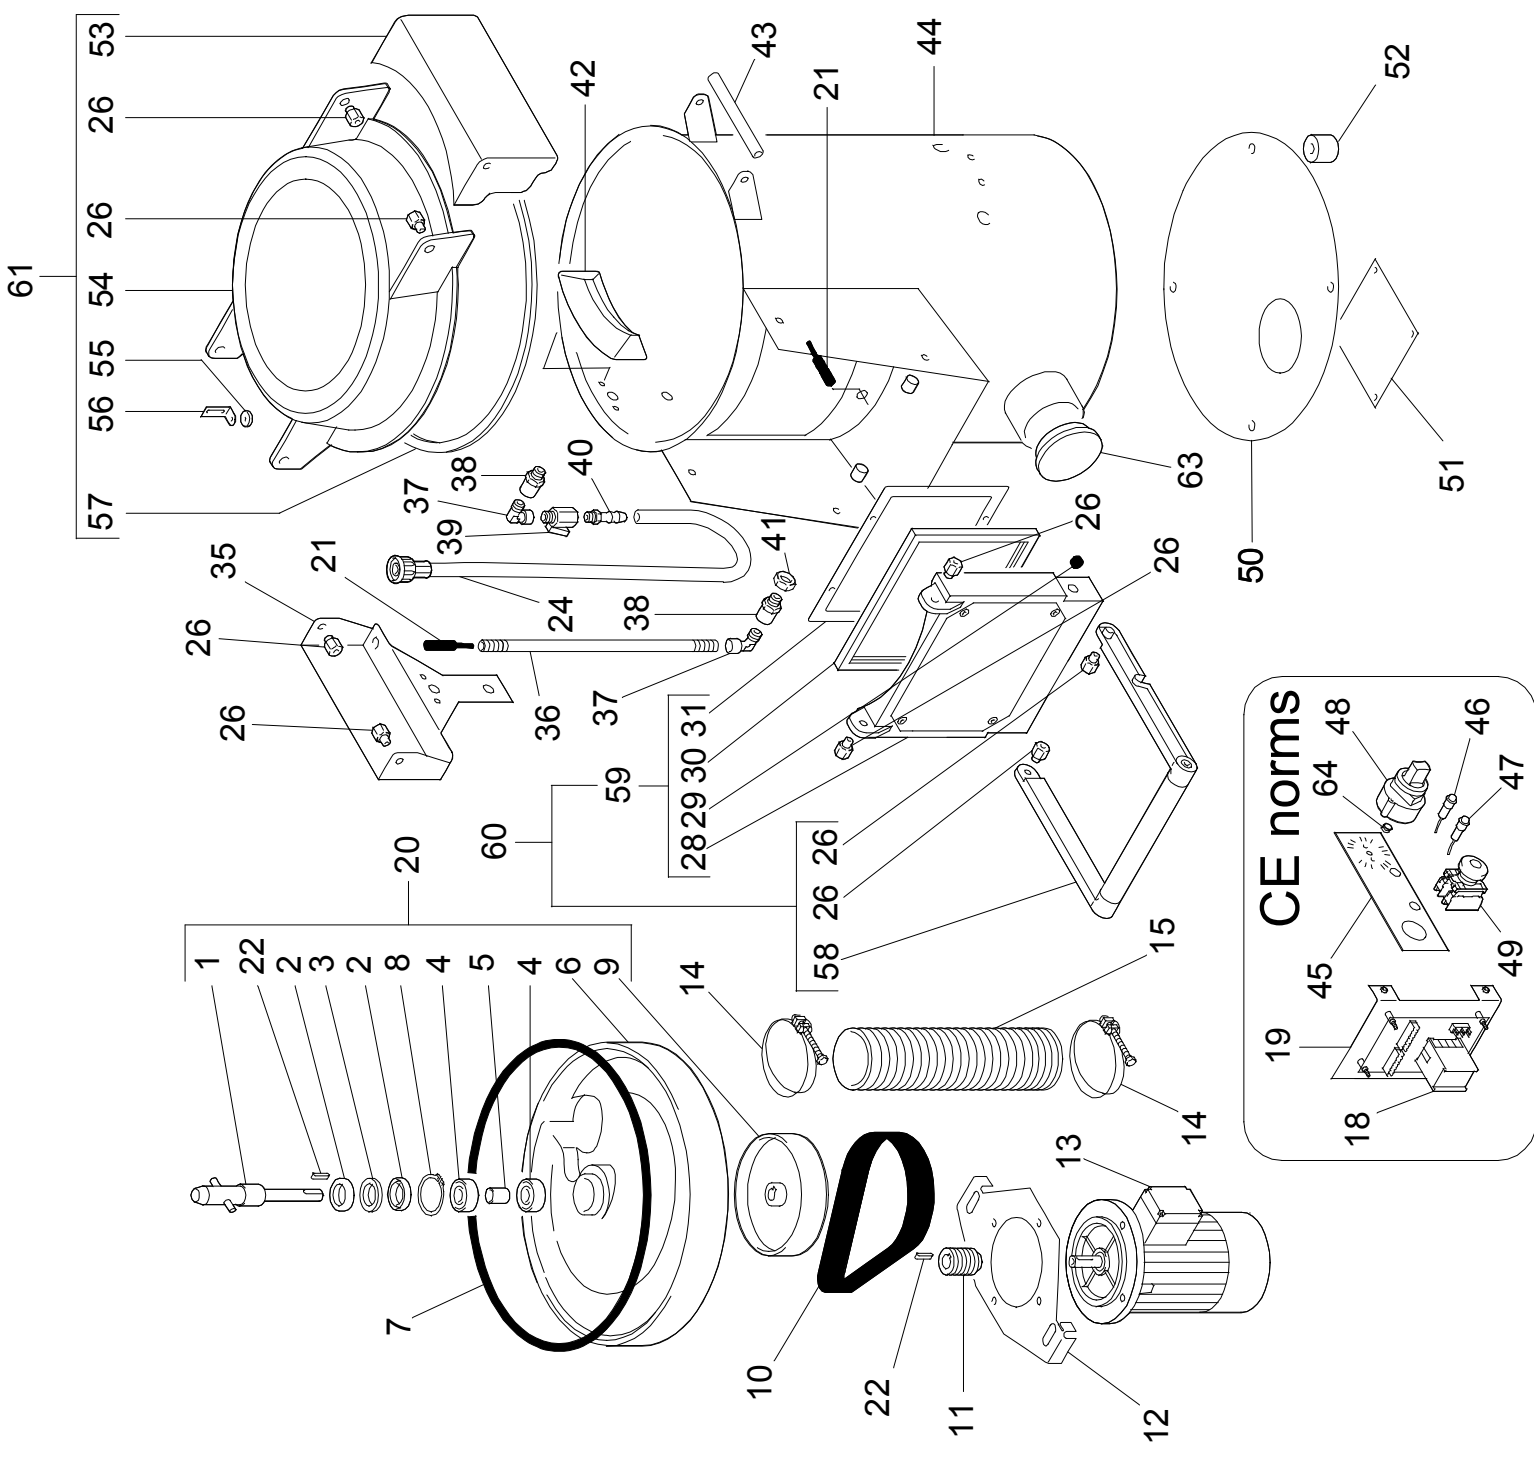
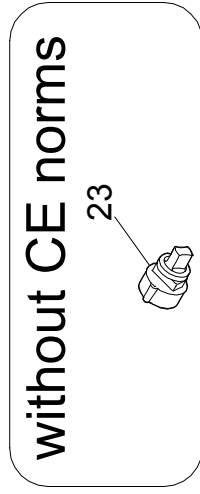
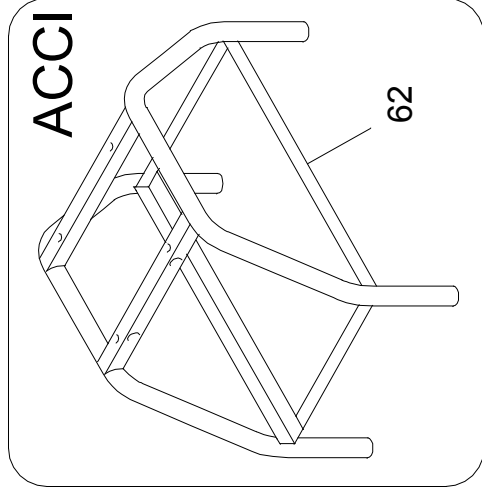


# EXPLOSIONSZEICHNUNG

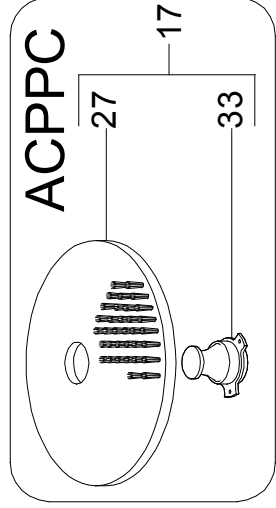

KBS Gastrotechnik GmbH – Schoßbergstraße 26 – 65201 Wiesbaden

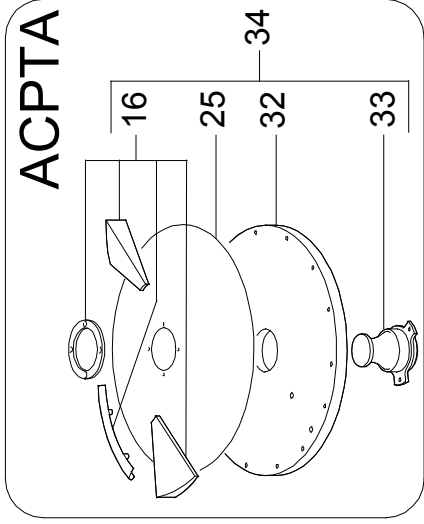

## PPN-PPF-LCN-LCF5

Pos. Ref.	Codice Code		Caratteristiche Features		Descrizione Description
1	36G6590				Albero Shaft
2	SL3943		ø28xø42x7		Paraolio Oil seal
3	3190830				Rosetta Washer
4	36F0090		6302 2RS		Cuscinetto Bearing
5	36G5950				Boccola Bush
6	3600870				Fondo Bottom
7	3151750				Anello Ring
8	SL2056		ø42		Seeger Seeger
9	36G6600				Puleggia Pulley
10	36G6610	●	Poly V-559 j12		Cinghia Belt
11	36G6620		(PPN-PPF5)		Puleggia Pulley
11	36G0030		(LCN-LCF5)		Puleggia Pulley
12	35V1230				Staffa Bracket
13	SL1471		400V/3Ph/50Hz (PPN-PPF5)		Motore Motor
13	SL1470		230V/1Ph/50Hz (PPN-PPF5)		Motore Motor
13	SL1518		400V/3Ph/50Hz (LCN-LCF5)		Motore Motor
13	32M0650		230V/1Ph/50Hz (LCN-LCF5)		Motore Motor
14	3140460		ø88+ø96		Fascetta Clip
15	35X1150		ø90		Tubo Tube
16	SA3460		plastic (PTA)		Kit disco Disk set
16	SA3450		28/01/08 f.p.(*)		Kit disco Disk set
17	ACPPC		Assembly (LCN-LCF5)		Disco cozze Mussel disk
18	SL2921	●			Scheda elettronica Electronic card
18	32Z4840		01/01/04 f.p.(*)		Teleruttore Remote control switch
19	SL2785R0				Piastra Plate
20	SA1064		Assembly		Fondo Bottom
21	32W3240	●	CE norms		Microinterruttore Microswitch
22	SL0010		5x5x20		Linguetta Key
23	SA1092	●	Assembly		Timer Timer
24	33M0010		3/4" F		Tubo Tube
25	SL3544				Tela abrasiva Emery cloth
25	SL2494	●	28/01/08 f.p.(*)		Tela abrasiva Emery cloth
26	36D9550				Boccola Bush
27	36G6880				Disco cozze Mussel disk
28	SA3400		Assembly		Sportello Door
29	3600160	●	CE norms		Magnete Magnet
30	37Q7860	●			Guarnizione Gasket
31	36C0011				Telaio Frame
32	SL3543				Disco Disk
32	SL2135		28/01/08 f.p.(*)		Disco Disk
33	SL3267				Pomello Knob
34	ACPTA		Assembly (PPN-PPF5)		Disco patate Potato disk
35	SL2904				Staffa Bracket
36	35X2330		CE norms		Tubo Tube
37	33Q6040		L 90° 1/4" M-F		Raccordo Nipple
38	33Q6210		1/4" M-F		Raccordo Nipple
39	SL1622		1/4" M-F		Rubinetto Cock
40	33Q5180		1/4" M ø12		Portagomma Cluch
41	3117580		1/4" CH17		Dado Nut
42	36D6040				Saltarello Leaper
43	36G2040				Perno Pivot
44	SL2693R0				Carcassa Housing
45	SL3705				Etichetta Label
45	SL3530		01/01/09 f.p.(*)		Etichetta Label
46	32W2970	●	230V 2W green		Lampada Lamp
47	32W3280	●	230V 2W white		Lampada Lamp
48	SA1087				Timer Timer
49	SA1088		Unstable		Pulsante Push button
50	35D7790				Fondo Bottom
51	35M0850		(PPN-LCN5)		Piastra Plate
52	SL1610	●	(PPN-LCN5)		Piedino Foot
53	36M5090				Maniglia Handle
54	36Z6501				Coperchio Cover
55	3600310	●	CE norms		Magnete Magnet
56	35V6381		CE norms		Staffa Bracket
57	SL2871	●			Guarnizione Gasket
58	SA1093		Assembly		Maniglia Handle
59	6000930		Assembly		Sportello Door
60	SA1072		Assembly		Sportello Door
61	6005380		Assembly		Coperchio Cover
62	ACCI		Assembly (PPF-LCF5)		Telaio Frame
63	SL2211		(PPF-LCF5)		Tappo Tap
64	SL0772		V-8-S		V-ring V-ring

(\*): fuori produzione / out of production

●: ricambio consigliato / spare part suggested